


Explosionszeichnung / Exploded diagram

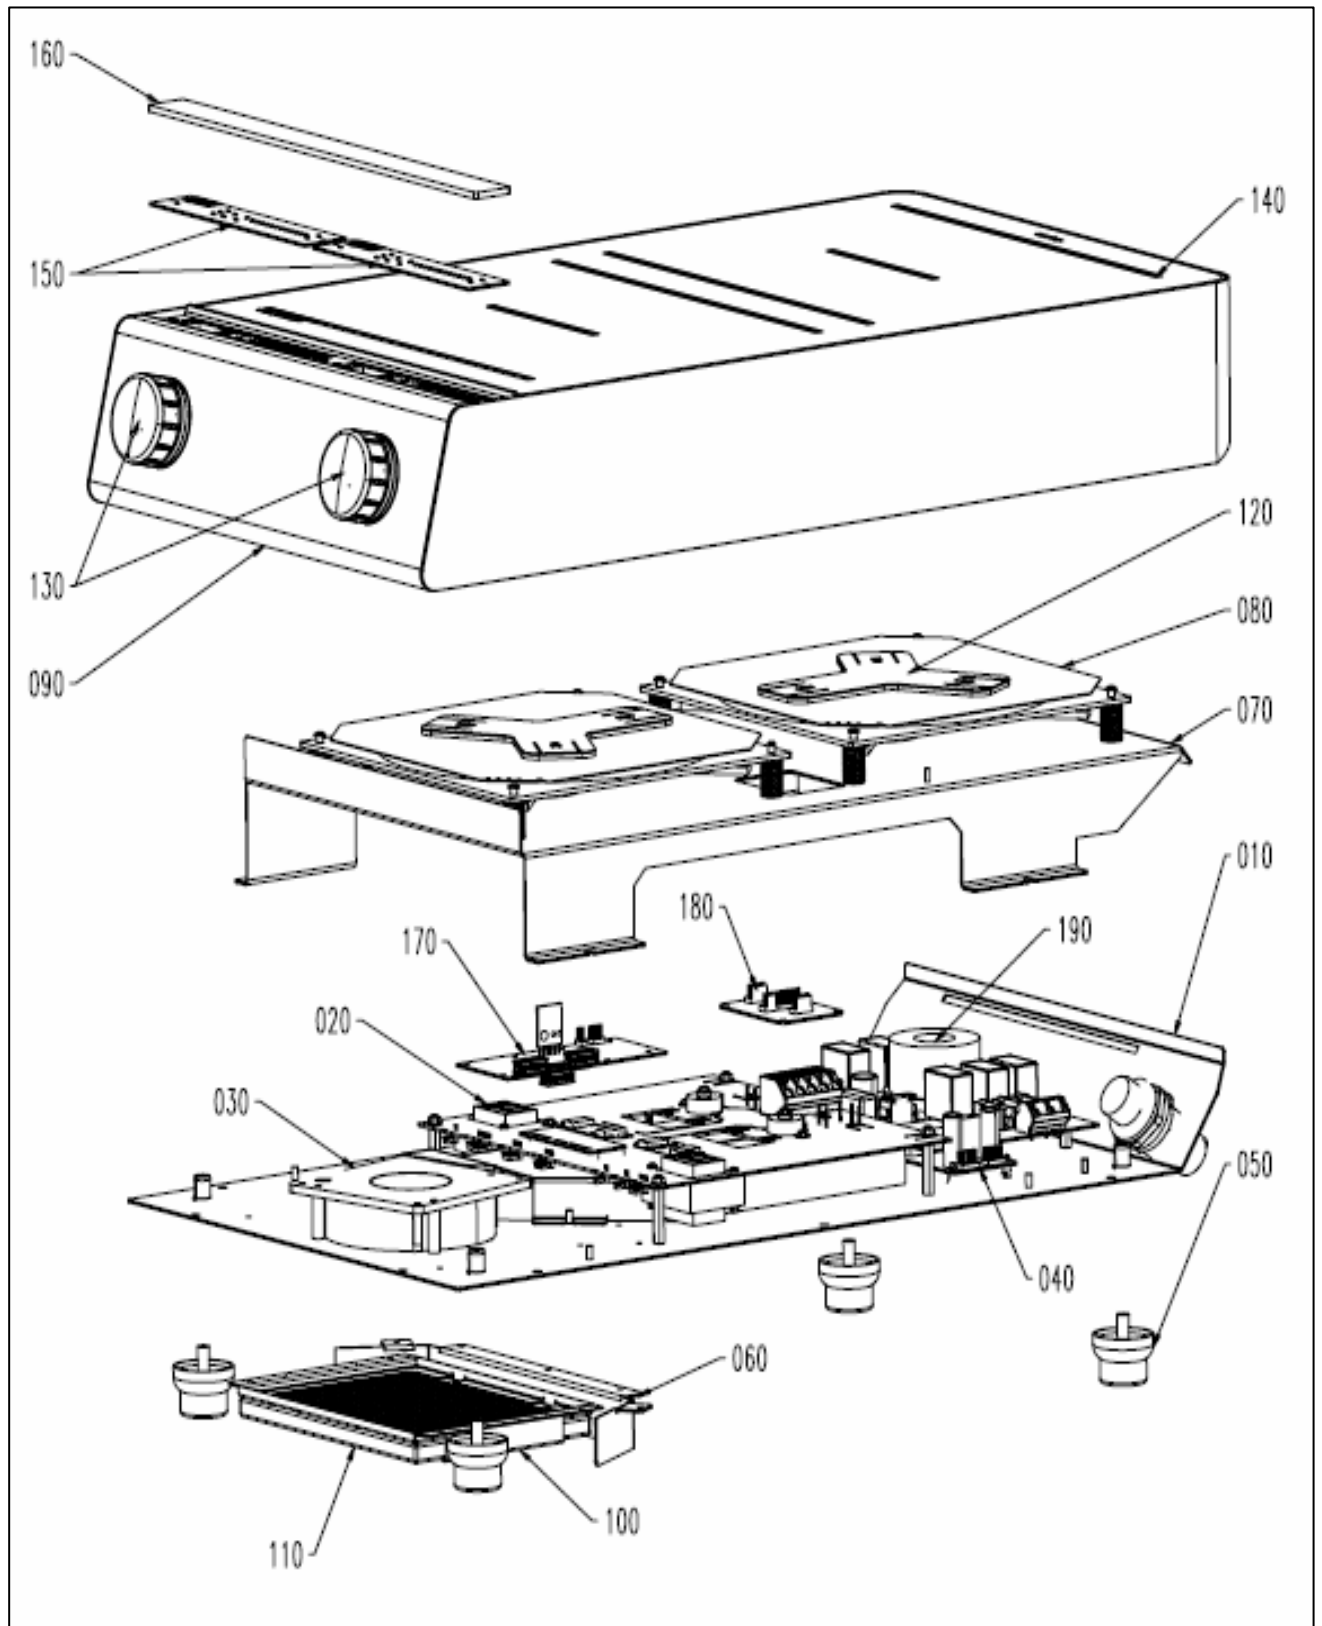

ERSATZTEILLISTE / SPARE PARTS LIST

Pos.	ArtNr	Description	Artikelbezeichnung	UOM / Mengeneinheit	Critical / Kritisch
20	98012315	LT I123, 400V, 3Ph., 2x5kW Dual	LT I123, 400V, 3Ph., 2x5kW Dual	1	Y
30	94090011	Radial fan 24V DC	Radialventilator 24V DC	1	Y
40	91120023	Print I120, AC/DC 208-400V	Print I120, AC/DC 208-400V	1	Y
50	71000035	Foot complete INSTINCT	Gerätefuss INSTINCT	4	N
60	72142470	Air deflector	Luftabweiser	1	N
80	93017055	Coil 17.05 with 3x PT-Sensor, 400V/5kW	Spule 17.05 mit 3x PT-Sensor, 400V/5kW	2	N
100	72261030	Frame for air filter	Luftfilterrahmen klein	1	N
110	71000003	Air filter 200x150x12mm	Luftfilter 200x150x12mm	1	N
120	94040135	Sensor-Unit / round coils, 12pol	Sensor-Unit / Rundspulen, 12pol	2	Y
130	94030060	Operating panel	Bedieneinheit	2	Y
140	77376000	Ceran glass INSTINCT Hob 10	Ceranglas INSTINCT Hob 10	1	N
150	91172011	Print I172 Display	Board I172 Display	2	Y
160	77373010	Float glass Instinct Hob 10	Floatglas Instinct Hob 10	1	N
170	91133310	Print I133 RTCsmp INSTINCT Dual	Print I133 RTCsmp INSTINCT Dual	1	Y
180	91109013	Print I109c Supply & CAN Interface	Print I109c Supply & CAN Interface	1	Y
190	91167010	Mains filter I167a / 3x16A	Netzfilterprint I167a / 3x16A	1	Y
	32750503	Mains plug EU 5 Pol. 400V/16A	Netzstecker EU 5 Pol. 400V/16A	1	Y
	38625050	Mains cable VDE 4x2.5mm2	Netzkabel VDE 4x2.5mm2	1	Y
	34150259	Fuses 25Amp	Sicherung 25A	10	Y
	34110019	Fuses 1Amp	Sicherung 1A	10	Y